



## DUCATI General Service and Maintenance – All Models

### Pre Ride Checks

Lights, indicators, horn, mirrors, brakes and controls  
Tyre condition, wear and pressures  
Oil level, brake fluid and coolant level (liquid cooled models)  
Fork seal condition  
Chain tension and lube

### Basic Service 12,000kms (DUCATI)

**Oil:** 10W/30 Full Synthetic (Note: Do not overfill, the level should be BETWEEN the marks)  
**Oil Filter:** KN153  
**Chain:** Check tension and lube

### Major Service 24,000kms (DUCATI)

**Oil:** 10W/30 Full Synthetic  
**Oil Filter:** KN153  
**Air Filter:** As per model  
**Fuel Filter:** KL145  
**Chain:** Check tension and lube  
**Brake Pads and Rotors:** Check for wear  
**Coolant:** Check level (liquid cooled models)  
**Camshaft belt change and valve clearance adjustment or every two years**

### Tyre Pressures

**Road Use:** Front 32-34PSI / Rear 36-38PSI  
**Track Use:** Front 30PSI / Rear 32PSI

### Brake Pads and Rotors

These will generally require replacement at 30,000kms dependent on your riding style

### Coolant (Liquid Cooled Models)

Every two years

### Chain and Sprockets

These will generally require replacement at 30,000kms dependent on your riding style

